

Multi Wireless Guitar

for Wii™

Designed for use with RockBand™ and Guitar Hero™ games.

Model: DU50273

RockBand™ and Guitar Hero™ are trademarks of Harmonix, Inc.™. This product is not sponsored or endorsed by Harmonix, Inc.™.


Thank you for purchasing this Multi Wireless Guitar. We hope you enjoy it.
For your personal safety and for the safety of others, please carefully read this instruction manual as well as the instruction manuals that come with your game console and games.

PRECAUTIONS


- Make sure to read the Instruction Manual of the Multi Wireless Guitar before using the product.
- If you have any health concerns, please consult with your physician prior to using the Multi Wireless Guitar.
- If at any time during game play you feel dizzy, nauseated, tingling or anything else abnormal, please take a break from playing. Blackhead recommends taking frequent breaks to prevent any of the above from happening.
- Keep all liquids away from this product. Getting this product wet will void your warranty.
- Do not insert objects of any kind into the product as this may cause damage or a fire hazard and void your warranty.
- Make sure small children are supervised while playing.
- Keep the Multi Wireless Guitar out of environments of extreme heat and extreme cold.
- If you have any technical or functional problems with the Multi Wireless Guitar, please contact Customer Service and do not try to modify the product as it is the problem yourself as this could void your warranty.
- When the Multi Wireless Guitar is not in use, make sure to store it properly for both safety and preservation of the product.

Quick Setup Guide

- Slide the guitar neck into the guitar body as shown below. Make sure nothing is caught between the neck and body while assembling.

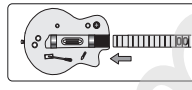


- To detach the guitar neck from the body, press the connect button and simultaneously pull out the neck.

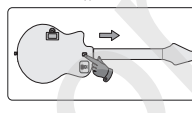

Wii Guitar Hero


1 Install batteries

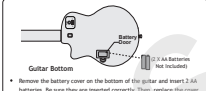

Guitar Back

- Remove the battery cover on the bottom of the guitar and insert 2 AA batteries. Be sure they are inserted correctly. Then, replace the cover. **IMPORTANT!** Always replace the battery cover to prevent moisture, dirt, dust or other foreign matter from entering the battery compartment.


2 Turn on

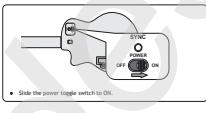

- Slide the power toggle switch to ON.

Wii Guitar Hero

3 Connect

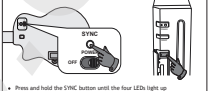


- Press and hold the SYNC button until the four LEDs light up simultaneously. Then release it. The four LEDs begin to flash.
- Press the SYNC button of your Wii console.
- One of the four LEDs will light up to indicate the player number. The guitar is ready to play.

Notes:

- Do not connect the attached receiver when you play Guitar Hero.
- For playing instruction, see the manual of Guitar Hero.
- When you want to play Rock Band™, please turn off the guitar first and follow the instructions below.

Wii Rock Band


1 Install batteries

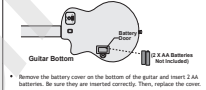

Guitar Back

- Remove the battery cover on the bottom of the guitar and insert 2 AA batteries. Be sure they are inserted correctly. Then, replace the cover. **IMPORTANT!** Always replace the battery cover to prevent moisture, dirt, dust or other foreign matter from entering the battery compartment.


2 Connect the receiver

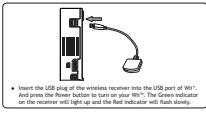

- Insert the USB plug of the wireless receiver into the USB part of Wii™ and press the Power button to turn on your Wii™. The Green indicator on the receiver will light up and the Red indicator will flash slowly.

Wii Rock Band

3 Connect the guitar with the receiver

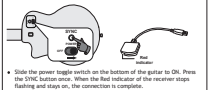


- Slide the power toggle switch on the bottom of the guitar to ON. Press the SYNC button once. When the Red indicator of the receiver stops flashing and stays on, the connection is complete.

Notes:


- If connection fails, make sure your operation is right and repeat connecting.
- For playing instruction, see the manual of Rock Band™.
- When you want to play Guitar Hero, please turn off the guitar and remove the receiver first and follow the instructions in the previous section.

Shift Fret Buttons to Solo Buttons

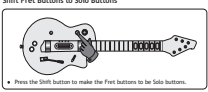

- Press the Shift button to make the Fret buttons to be Solo buttons.

Button Configuration

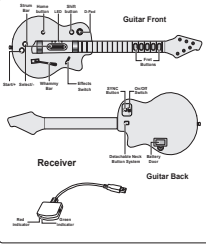

Guitar Front

Receiver

Guitar Back

WARRANTY AND TECHNICAL SUPPORT

Every Blackhead branded product comes with a 10 day warranty (U.S. Only). Blackhead will repair, replace or refund any defective product or component at no charge to you within 10 days of the purchase date. This warranty does not apply to Blackhead products that have been damaged by misuse, neglect, or accident or otherwise, or that have been altered, modified, repaired, or otherwise tampered with. This warranty does not cover consequential or incidental damages. There is no obligation to return or replace a product or component. This warranty is void where prohibited by law. This warranty is void if the product is not used in accordance with the instructions. For more information, please contact our customer support.

For general questions, comments, information or grammar tips, email us at info@blackheadguitar.com or call us at 1-877-44-ROCK.

FCC INFORMATION

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC rules. This device is designed to provide reasonable protection against harmful interference to a residential installation. This equipment does not, and will not, cause harmful interference to a residential installation. However, if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate equipment.

Blank page for additional information or diagrams.

Blank page for additional information or diagrams.